
Straight tuck folding carton

Nominal crease spans: 50 × 27 mm footprint and 74 mm height. Trial stock: 0.45 mm paperboard.

Cut Score / fold

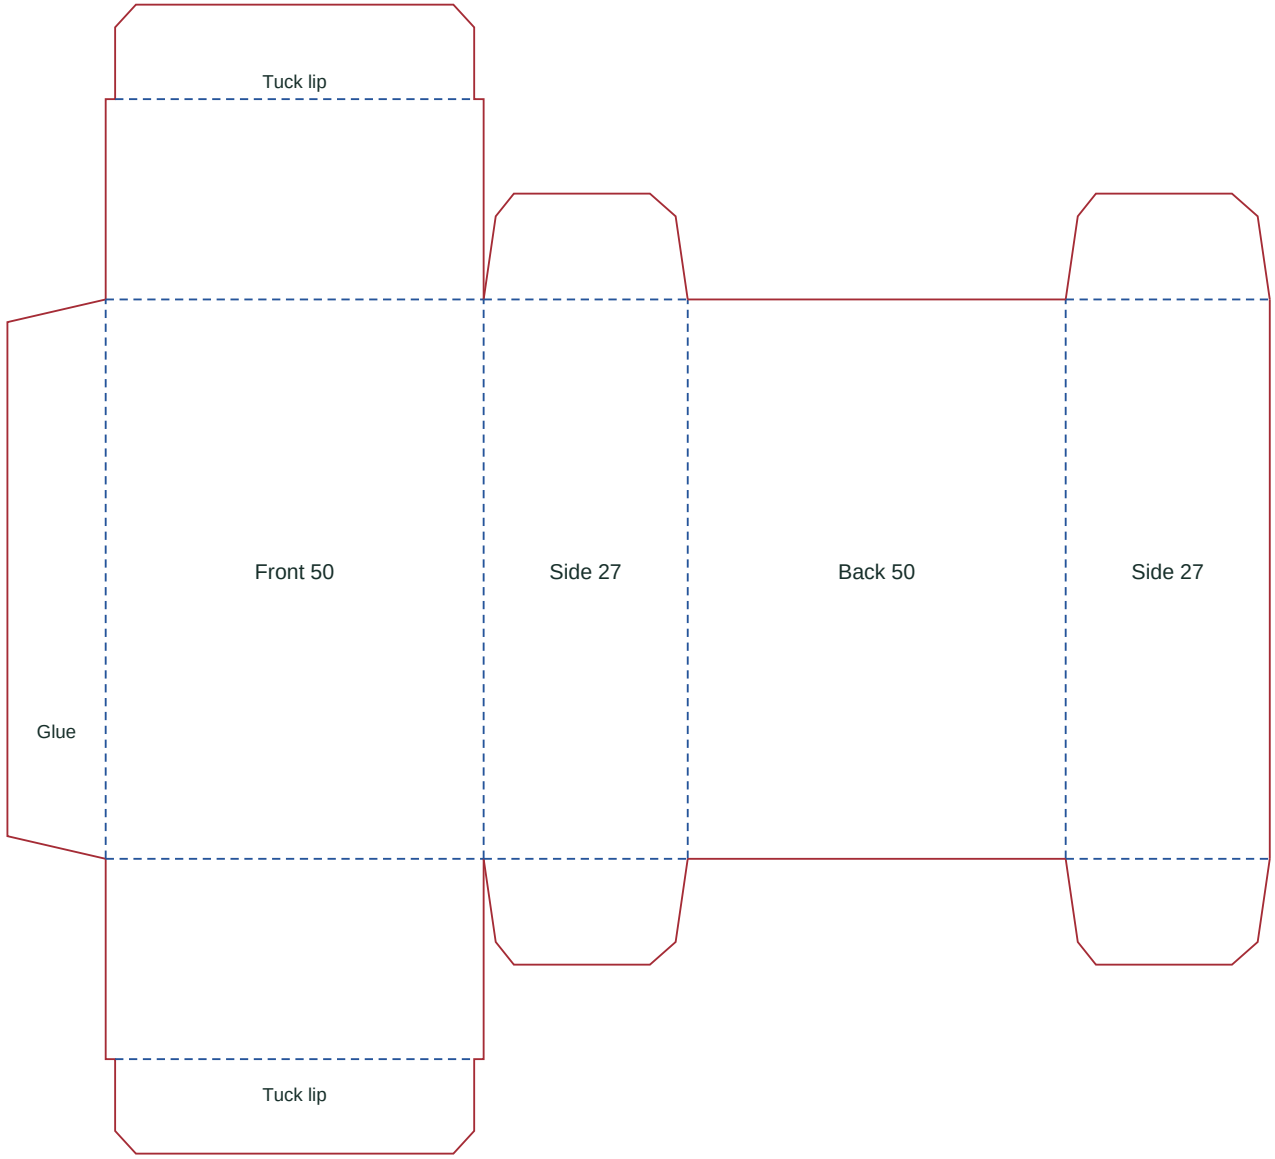

Mockup assembly

1. Cut the red outline and score the blue lines. Keep both tuck lips attached.
2. Fold the four panels into a tube. Bond the narrow glue tab behind the last side panel.
3. Fold the dust flaps in, then close each cover and tuck its lip behind the back panel.

Measure the finished inner fit on your material. Production crease allowances depend on stock caliper.

50 mm print check